




Instruction Manual

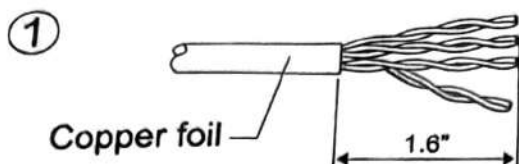

Strip off 1.6 inch of a cable jacket and fold braid back over it. Cut off aluminum foil for each pair, and use a supplied copper foil shield surrounding a cable.

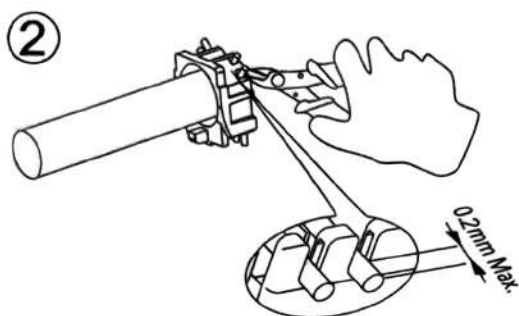


Insert a cable into the termination cap and fan out all four twisted pairs. Following the instruction of the color-coded wire position printed on the termination cap, position conductors into the slots and make sure the conductors are in the proper slot. Trim the ends of the conductors


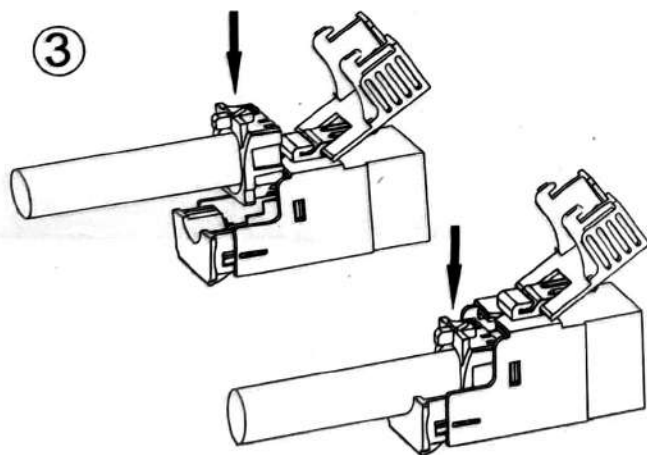


Place the network cable cap on the card from top to bottom, all the way down.

JACK PIN DESIGNATIONS		TIA/EIA T568A	TIA/EIA T568B
	1	White/Green	white/Orange
	2	Green	Orange
	3	white/Orange	White/Green
	4	Orange	Green
	5	Blue	Blue
	6	white/Blue	white/Blue
	7	White/Brown	White/Brown
	8	Brown	Brown

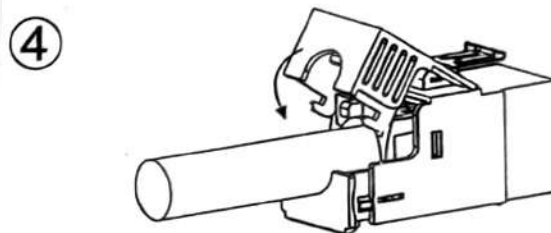

Press down the upper cover and push the wire cap to clamp the wire in place.

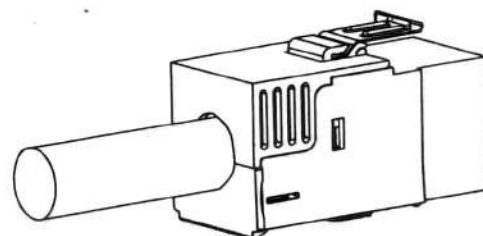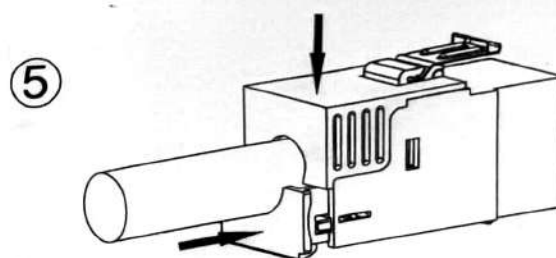

After pressing the upper cover to the bottom, push on the safety card to secure the top cover. By operating in reverse order, modules can be opened.